

## **Installation Instructions**

### **Rotary chimney cowl Turbowent**

During the installation on the roof take care of safety instructions, which are applied on this type of work. It is recommended to entrust the installation to professionally trained specialist.

Turbowent chimney cowls are ideal for outlets of chimneys exhausting gas boilers fumes. The cowls are designed to withstand temperatures up to 150°C.

#### **Attention:**

***To unpack the chimney cowl pull out gently the little plastic ball. During the transport and installation it is necessary to manipulate with the turbine with care. An inappropriate manipulation could cause cowls deformation or damage. This fact can later cause problems with the head's rotation and make the chimney cowl less effective.***

#### **How to install Your Turbowent chimney cowl with openable base:**

- 1) Put the chimney cowl on a chimney board
- 2) Use a spirit level to check horizontal position of the chimney cowl base
- 3) Centre the opening in the chimney cowl with the chimney outlet opening
- 4) Use a permanent marker to mark 4 holes for drilling
- 5) Drill 4 holes for wall fasteners (6mm diameter) into the chimney board
- 6) Put the chimney cowl again on the chimney board and screw it by four screws into prepared wall fasteners
- 7) Spin the chimney cowl to check its regular operation

#### **How to install Your Turbowent chimney cowl with openable inlet pipe:**

- 1) Drill four holes approximately 3 cm from the lower edge of the chimney cowl neck
- 2) Attach the chimney cowl directly to the line for exhaust fumes (existing end liners or end of the double-walled chimney) and mark hole locations that you later drill into the flue liners
- 3) Drill 4 holes and attach the chimney cowl on existing flue liner, center the openings and screw it by tapping screws or rivet it
- 4) To avoid damage of the ball bearings make yourself sure, that the chimney cowl is in horizontal position.
- 5) Spin the chimney cowl to check its regular operation

***The chimney cowl or metal pipes beneath it, as the conductive element, must be according to the standard earthed.***

#### **Dismantling instruction:**

During the removing of the turbine act in the reverse way than during the installation. Take the turbine down from the roof and liquidate it according bellow mentioned instructions.

**Liquidation of the product and packaging:**

The stainless steel product, including the paper package, place into the eco collection center.

Producer: Darco Sp. Zo.o, Osiedle 48, 39-206 Pustków, Poland



[aluroofing.co.uk](http://aluroofing.co.uk)

Registered Office: Wenceslas Square 808/66. Prague 1, Czech Republic